 





Universal SubWoofer Wireless Kit

USER MANUAL


RECEIVING UNIT

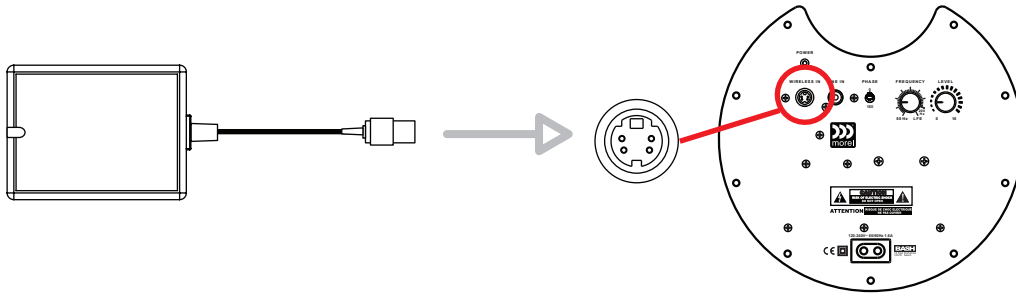

 TRANSMITTING UNIT

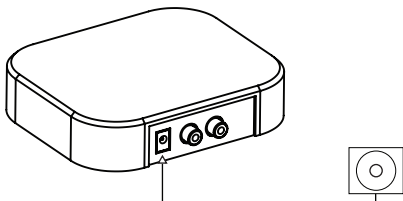


Plug the 5 Volt supply into the transmitter.

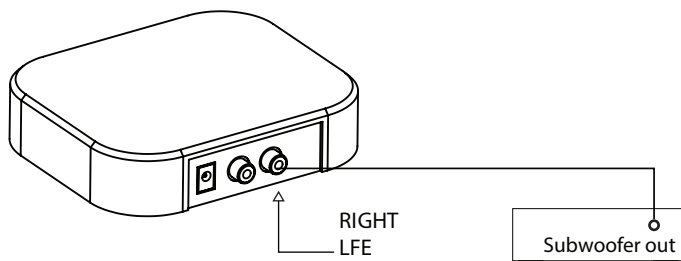

Connect to the LFE input

When a multi-channel audio/video amplifier is used, the transmitters single LFE input should be connected to the "Subwoofer" output on the audio/video amplifier. This connection refers to LFE IN or for single amp output.

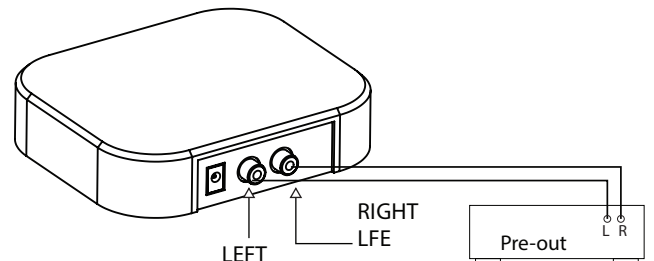

Connect low level RCA inputs

When a 2-channel amplifier with pre-out line outputs is used, The transmitting unit must always be connected using the RCA stereo Right/Left inputs.

OR

SPECIFICATIONS

Range in Meter	15m (in a room)
Sound Sampling	16 bits
Sampling Frequency	44,1kHz
Coding Delay	13ms
Sensitivity	0dBm
Frequency Band	2,4 GHz ISM band